



WALL COVERING

TOOLS REQUIRED

- PL construction adhesive
- Caulking gun for construction adhesive
- 18 gauge finishing nails
- Chalk line
- Finish nailer
- Mesuring tape
- Level
- Set square
- Miter saw
- Saw bench

DIMENSIONS

- Thickness: 5/8"
- Width: 3"
- Length: 24"
- Covering: 9.38 sq. ft. per box
- Pieces: 7 per package

ADDITIONAL INFORMATION

- Outdoor installation: No
- Specie: MDF white primed

WORKING ENVIRONMENT PREPARATION

Square box paneling installation should be the last step of a construction or renovation. First allow the MDF to acclimatize to the air and the ambient temperature for at least 72 hours prior to installation.

SURFACE PREPARATION

Please note that MDF Square box paneling will not correct any apparent or pronounced defects of the wall. It is therefore essential to make sure the wall or surface you are covering is in good condition prior to starting installation. Even out the surface by eliminating any remaining glue, nails, or any other material that could interfere with installation.

INSTALLATION

Make sure you have good natural lighting before starting the project. When installing the Square box paneling, make sure the first installation row must be perfectly leveled.


BEFORE YOU BEGIN

Before installing the product, the installer and/or owner must make sure that the wall complies with the conditions specified in this document. The installer and the buyer are responsible for inspecting the products before installing them. If the installer notices imperfections in product manufacturing or finishing and cannot install the product in an inconspicuous location or eliminate the imperfections, he or she should not install it. Five percent imperfection is considered acceptable for each box. This percentage does not include the cutting loss mentioned above. Once the product is installed, it is considered to have been accepted by the installer and/or the owner, even if he/she was not present during installation. Customers must make sure the product purchased is suitable for the desired installation.

WALL COVERING INSTALLATION STEPS


STEP 1

Find the centre of the area you want to cover. Use a chalk line to mark the centre lines. This will ensure your design is properly centred.

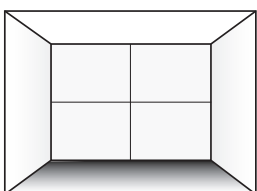

STEP 2

Lay out the box panels on the floor in the design you want. Depending on the size of your room, decide whether you will start installation with box panels **(A)** or centred adjacent box panels **(B)**.

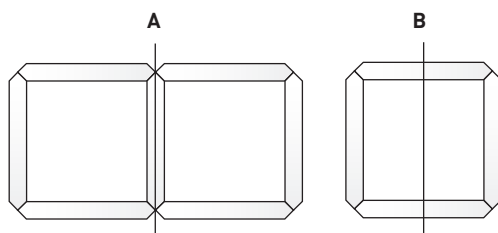

STEP 3

Install your first box panel using wood glue and finishing nails **(A)**. Make sure it is perfectly straight. Otherwise the pieces you install next **(B)** will be off kilter.



STEP 4

Repeat with the remaining box panels.

STEP 5

Cover the holes with filler and paint the panels.