



WALL OR CEILING COVERING

TOOLS REQUIRED

- PL construction adhesive
- Caulking gun for construction adhesive
- 18 gauge finishing nails
- Finish nailer
- Measuring tape
- Level
- Miter saw
- Saw bench

DIMENSIONS

- Thickness: 3/4"
- Width: 6"
- Length: 15"
- Square pattern covering: 3.28 sq. ft. per box
- Vertically pattern covering: 2.5 sq. ft. per box
- X pattern covering: 3.44 sq. ft. per box
- Pieces: 4 per box

ADDITIONAL INFORMATION

- Outdoor installation: No
- Specie: MDF white primed

WORKING ENVIRONMENT PREPARATION

Hexō installation should be the last step of a construction or renovation. First allow the MDF to acclimatize to the air and the ambient temperature for at least 72 hours prior to installation.

SURFACE PREPARATION

Please note that MDF Hexō pattern will not correct any apparent or pronounced defects of the wall. It is therefore essential to make sure the wall or surface you are covering is in good condition prior to starting installation. Even out the surface by eliminating any remaining glue, nails, or any other material that could interfere with installation.

INSTALLATION

Make sure you have good natural lighting before starting the project. When installing wall patterns, it is essential that the first row is perfectly leveled.


BEFORE YOU BEGIN

Before installing the product, the installer and/or owner must make sure that the wall complies with the conditions specified in this document. The installer and the buyer are responsible for inspecting the products before installing them. If the installer notices imperfections in product manufacturing or finishing and cannot install the product in an inconspicuous location or eliminate the imperfections, he or she should not install it. Five percent imperfection is considered acceptable for each box. This percentage does not include the cutting loss mentioned above. Once the product is installed, it is considered to have been accepted by the installer and/or the owner, even if he/she was not present during installation. Customers must make sure the product purchased is suitable for the desired installation.

WALL COVERING INSTALLATION STEPS


STEP 1

Determine the central point of your Hexō pattern on your wall or ceiling.

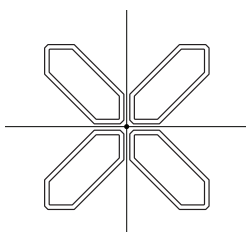


STEP 2

Once the central point has been determined, mark a horizontal and vertical line in order to form a cross.

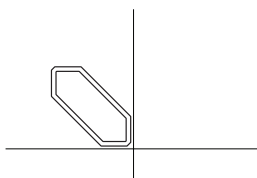


STEP 3

Apply some glue at the back of the first Hexō and fix it with a pneumatic nailer.

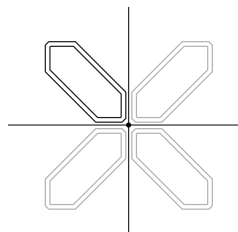

STEP 4

Take another Hexō and lean it against the first while repeating step.

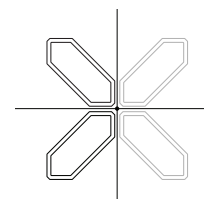

IMPORTANT:

The installation steps are the same for the square, vertical, and X patterns, as shown.

STEP 5

Install another Hexō, but invert it. Repeat the previous steps.

