



# IRREGULAR BAGUETTES

## TOOLS REQUIRED

- Erasable pencil or masking tape
- Finishing nails, 18 gauge
- Finishing nailer
- Tape measure
- Level
- Mitre saw
- Wood filler
- Spring loaded-punch
- Caulking
- Caulking gun

## MATERIAL REQUIRED

### 1321 | RECTANGLE

- Thickness: 3/4"
- Width: 1-1/2"
- Length: 96"

## ADDITIONAL INFORMATION

- Exterior installation: No
- Type: MDF with white primer
- When buying your material, allow about a 10% loss for cuts.

## RECOMMENDATIONS

It is strongly recommended that you take the measurements of your wall before beginning in order to adjust your plans and make the calculations necessary to complete your project. You can print this guide and make it your personalized plan, based on your space, so you can determine the quantity as well as the width of your patterns.

## TIP

Use an erasable pencil/marker or masking tape to mark the location of the mouldings directly on your wall. If the dimensions of the patterns do not provide the desired effect, adjust your plans. It's best to paint the background of your wall in your desired colour before you begin creating the pattern. Once the mouldings are installed, can also be painted to harmonize your project.




# INSTALLATION STEPS

## STEP 1:

Measure the length of the wall to determine the number of vertical mouldings (A) you will have to cut. We recommend that you leave 12" between each of the vertical mouldings (A). For example, for a wall that's 10' long, you will have 9 vertical mouldings (A), attached at 12" from the left.

Measure the height of the wall from the top of your baseboard to the ceiling and deduct 18" to determine the length of the vertical mouldings (A). Fasten the vertical mouldings (A) from the top of the wall with the finishing nailer. Make sure the mouldings are level.

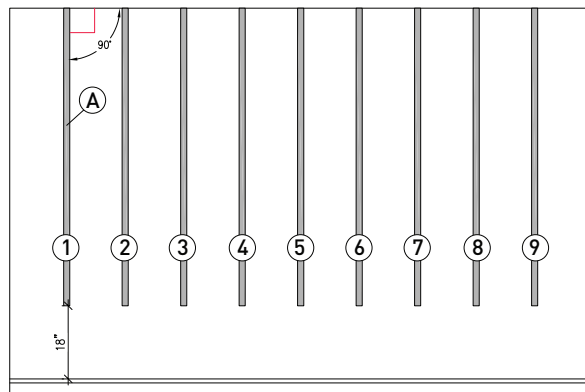

## STEP 2:

Vertical mouldings (B) will be installed centered between vertical mouldings (A).

Measure the height of the wall from the top of your baseboard to the ceiling and deduct 18" to determine the length of the vertical mouldings (B). Fasten the vertical moldings (B) from the top of the baseboard with the nail gun. Make sure the mouldings are level.

Use wood filler and caulking to conceal imperfections. Let dry, lightly sand and paint the mouldings the same colour as the wall.

